

Root Flow Installation



Using a Screw Driver,
create a pilot hole




Move the screwdriver
in circles to widen the hole



Use a mallet to install
the stake into the ground

Optional Drip Irrigation Connection Feature:

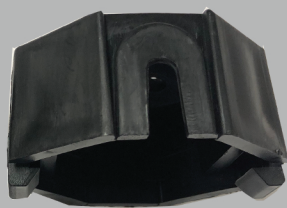

Remove Irrigation Cap
From the Stake



Easily snap out u-shaped
piece to allow for 1/2"
drip line installation



Replace cap on stake
and install drip once
stake is in the ground